


CLIMATE CONTROL

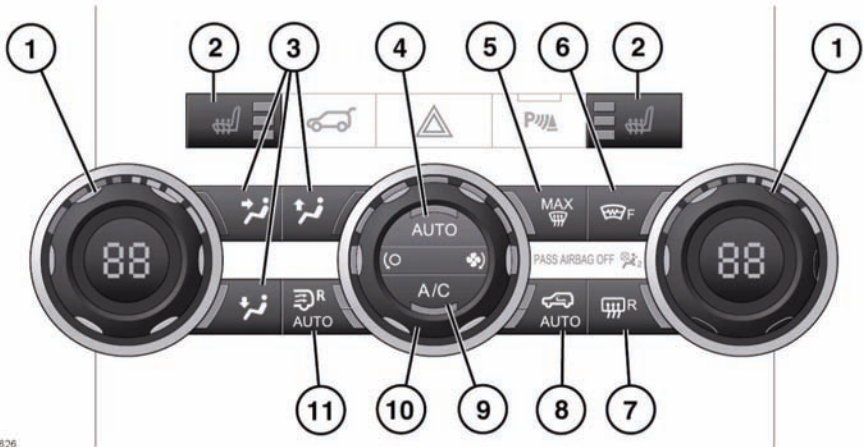

E135626

1. Temperature controls. For individual driver/passenger settings.
2. Seat heaters: Press once to turn on high, twice to turn on medium, three to turn on low, and a fourth time to turn off.
3. Air distribution.
Note: More than one setting may be selected at a time to achieve the desired distribution.
4. Auto mode. For fully automatic operation.
5. Maximum defrost programme.
6. Heated windscreen. The heated windscreen will deactivate after a predetermined length of time.
7. Heated rear screen. The heated rear screen will deactivate after a predetermined length of time.



Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.

8. Recirculation. Press for timed recirculation. Press and hold for latched (continuous) recirculation. To cancel recirculation, press the button again.
Note: Prolonged use at low temperatures may cause the windows to mist.
Note: Timed recirculation is automatically determined, depending on ambient temperature and A/C status.
9. Air conditioning.
10. Blower speed control: Rotate to adjust blower speed. Rotate fully anticlockwise to switch off climate control.
11. Rear environment
Note: The indicator lamps in the switches will illuminate when the function is selected.
Note: In low temperatures it is advisable to close the centre face level vent and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.