

# Warning lamps

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off.

## DYNAMIC RESPONSE (AMBER)

Illuminates to indicate a fault with the dynamic response system. The message **VEHICLE LEAN WHEN CORNERING** is displayed. The detected fault will result in reduced dynamic response performance. The vehicle can still be driven, but reduce speed and seek qualified assistance at the earliest opportunity.

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp remains on or illuminates whilst driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

## AIRBAG (AMBER)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

## LOW FUEL WARNING (AMBER)



Illuminates when the remaining fuel falls to an approximate range of 80 km (50 miles). Refuel at the earliest opportunity.

## FOLLOW MODE (AMBER)



Illuminates when the Adaptive cruise control system is in follow mode.

## TYRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates when one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.