

Warning lamps

DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off.

DYNAMIC RESPONSE (AMBER)

Illuminates to indicate a fault with the dynamic response system. The message **VEHICLE LEAN WHEN CORNERING** is displayed. The detected fault will result in reduced dynamic response performance. The vehicle can still be driven, but reduce speed and seek qualified assistance at the earliest opportunity.

ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp remains on or illuminates whilst driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

AIRBAG (AMBER)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

LOW FUEL WARNING (AMBER)



Illuminates when the remaining fuel falls to an approximate range of 80 km (50 miles). Refuel at the earliest opportunity.

FOLLOW MODE (AMBER)



Illuminates when the Adaptive cruise control system is in follow mode.

TYRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates when one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.