

SIDE REPEATER LAMP BULB REPLACEMENT

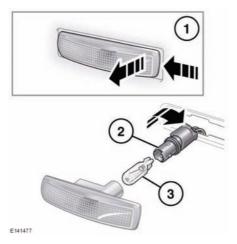

Follow the steps illustrated. Insert a new bulb and refit the components.

- 1. Push and release.
- 2. Rotate the bulb holder anticlockwise to unlock then pull to remove.
- 3. Pull out the bulb to remove.

LICENSE PLATE LAMP BULB REPLACEMENT

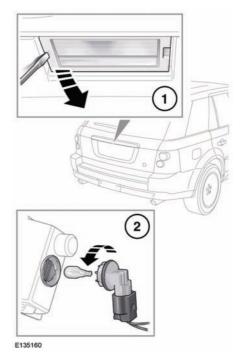

- 1. Using a small flat-bladed screwdriver, carefully prise the lamp from the tailgate.
- Rotate the bulb holder anticlockwise to unlock then pull to remove. Pull out the bulb to remove.