

While a range change is in progress, the range indicator lamps will flash as follows:

Hi to Lo change:

- The **Lo** range lamp and indicator flash during the change and then illuminate constantly.
- The **Hi** range lamp extinguishes when the change is complete.
- The message **LOW RANGE SELECTED** is briefly displayed in the message centre.

Lo to Hi change:

- The **Hi** range indicator and the **Lo** range lamp and indicator flash during the change.
- The **Hi** range indicator illuminates constantly when the change is complete.
- The **Lo** range indicator extinguishes when the change is complete.
- The message **HIGH RANGE SELECTED** is briefly displayed in the message centre.

RANGE CHANGING ON THE MOVE

The recommended method of changing range is with the vehicle stationary. For experienced off-road drivers, a range change on-the-move can be accomplished, as detailed below.

AUTOMATIC TRANSMISSION HIGH TO LOW RANGE

1. With the vehicle slowing down, and travelling between 40 km/h (24 mph) and 3 km/h (2 mph), select **N**.
2. Press and release the rear of the transmission switch to select **Lo**.
3. Wait for the range change to be completed (this may take several seconds). Once complete, select the desired gear. A gear cannot be selected until the range change is complete.

CHANGING FROM LOW TO HIGH RANGE

With the vehicle travelling no faster than 60 km/h (38 mph), select **N**. Press and release the front of the transmission switch to select **Hi**.

Indication of the range change status is the same as for the stationary method.

Now select **D**.