

6. If the colour of the camera position arrow in the display changes from blue to red, the system has detected that the camera is dirty. Clean the camera in accordance with the guidelines given on page. See **173, CLEANING THE EXTERIOR.**

## PROXIMITY VIEW

Selecting **Proximity View** will display a combination of three images from the front and passenger side cameras.

## TRAILER GUIDANCE

**Note:** Trailer guidance requires a connected trailer to be fitted with a tracking target sticker, which **must** be attached according to specific instructions. Ask your Dealer/Authorised Repairer for details.



E134952

**Note:** This feature may not operate with all trailer designs.

Trailer guidance aids trailer reversing, by displaying information on the touch screen.

Trailer guidance becomes active when a trailer is attached to the vehicle and the trailer electrical plug is attached to the vehicle socket. The screen will display a choice for connection. Select **YES** to move to the setup screen. Select **NO** to return to the previous screen.

**Note:** If the connection is not detected, setup can be manually prompted by touching the Tow Assist soft key on the Camera menu.

## TRAILER SETUP

On first use, the setup screens take the user through a series of configuration options for the connected trailer. Information such as trailer length, number of axles and camera preference is required to finalise setup. Once completed, the details are stored for future use.

## CAMERA SYSTEM OPERATION

When a new or existing trailer configuration is selected, Trailer guidance automatically displays on the touch screen when reverse gear is selected. Coloured lines are displayed to indicate the predicted path of both trailer and vehicle.