


## TOUCH SCREEN HOME MENU

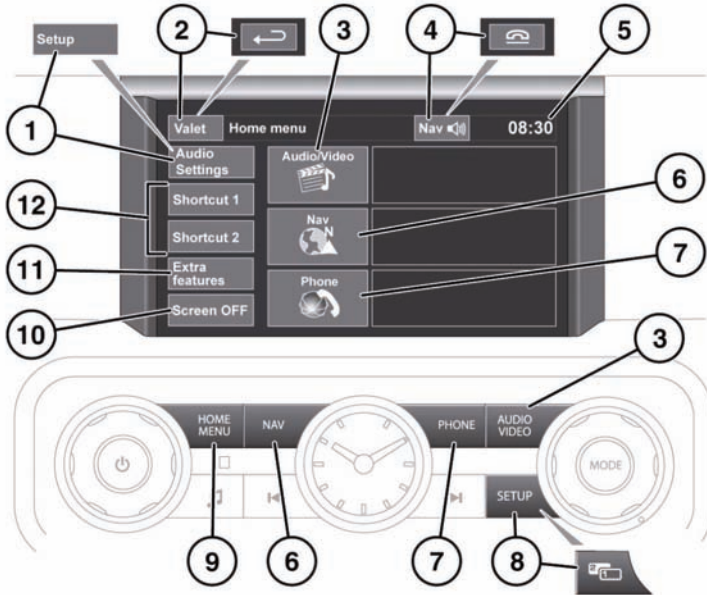

E141134

- ⓘ Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting.
  - ⓘ Avoid spilling or splashing liquids onto the touch screen.
1. Touch to select the **Audio settings** menu or the touch screen **Setup** menu. See **109, AUDIO SETTINGS**
  2. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed
  3. Touch or press to select the **Audio/Video** menu. See **108, AUDIO/VIDEO CONTROLS**.
  4. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
  5. Touch to adjust time/date.
  6. Touch or press to select the **On road Navigation** menu. Current set destination is displayed.
  7. Touch or press to select the **Phone** menu.
  8. Press to select the touch screen **Setup** menu or to activate dual view.
  9. Press to select the **Home** menu.
  10. Press to turn off the screen.
  11. Press to select the **Extra features** menu.
  12. Touch to select Home menu shortcuts. See **106, SCREEN SETTINGS**.