


INTERIOR LIGHTS

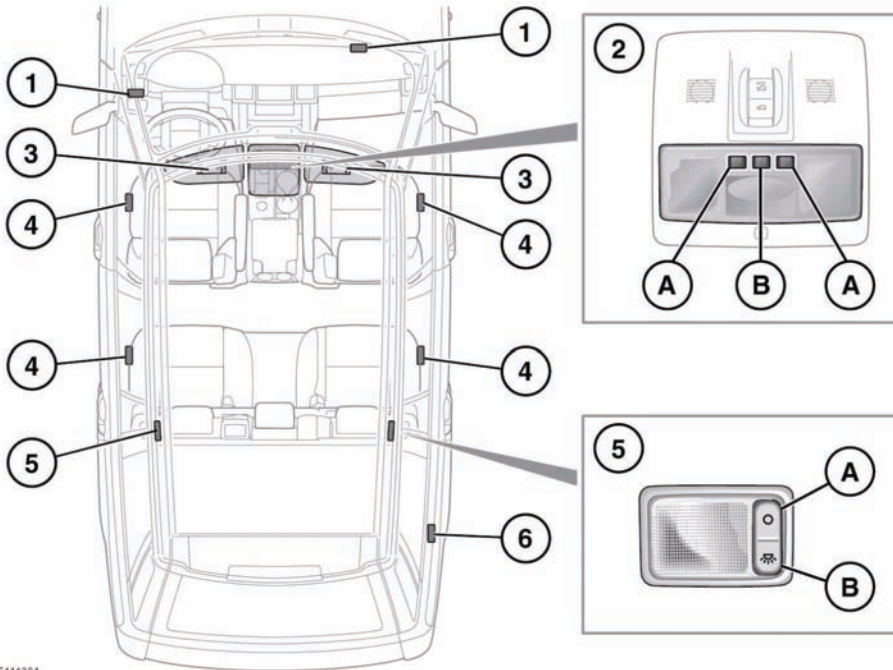

E141364

- 1.** Front footwell lamps: Automatically illuminate when the doors are opened.
- 2.** Map reading/interior lamps:
 - A.** Map light controls (on/off).
 - B.** Main interior lamp control (on/off/auto).
To activate or deactivate auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.
- 3.** Vanity mirror lamps: Automatically illuminate.
- 4.** Puddle lamps: Automatically illuminate when the doors are opened.
- 5.** Rear courtesy lamps:
 - A.** Press to turn off.
 - B.** Press to turn on.
- 6.** Loadspace lamp: Automatically illuminates when the tailgate is opened.