


UNLOCKING THE VEHICLE

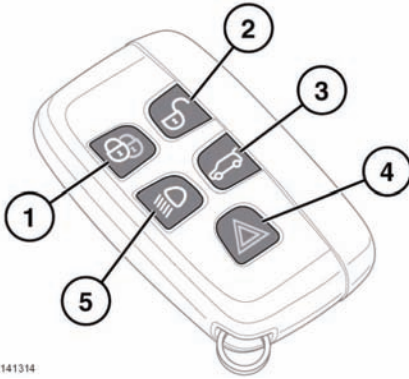

E141314



To prevent accidental operation, never leave the Smart Key in the vehicle if children or animals are also left in the vehicle.

Note: The operational range of the Smart Key will vary considerably depending on atmospheric conditions and interference from other transmitting devices.

Note: If any door or the tailgate is unlocked 10 times within a short period, the latch is disabled for approximately one minute.

The Smart Key acts as a remote control for the locking and alarm system, and allows the vehicle to be locked, unlocked and driven without the use of a conventional key. See **10, KEYLESS ENTRY**, **5, SINGLE LOCKING** and **75, STARTING THE ENGINE**.

1. Lock:

Press once to lock the vehicle. All doors and the tailgate will lock (but can still be unlocked from inside) and the perimeter alarm will arm. See **5, SINGLE LOCKING** and **5, PERIMETER ALARM**.

Press twice (within 3 seconds) to double lock the vehicle. All doors and the tailgate will lock (and cannot be unlocked from inside the vehicle) and both the perimeter alarm and interior space protection will be armed. See **5, DOUBLE LOCKING**, **5, FULL ALARM** and **10, GLOBAL OPENING**.

2. Unlock:

Press briefly to unlock the vehicle and deactivate the alarm. The hazard warning lamps will flash twice to indicate that the vehicle is unlocked and the alarm has been deactivated. The interior lamps will illuminate to assist entry to the vehicle. Also see **10, GLOBAL OPENING**.

When you press the unlock button, your vehicle will unlock in one of two ways:

- Single point entry: Unlocks the driver's door and fuel filler flap only. A second press is required to unlock the remaining doors and the tailgate.
- Multi-point entry: Unlocks all doors, fuel filler flap and the tailgate on the first press.

Single point entry can be disabled on individual Smart Keys by unlocking the vehicle then simultaneously pressing and holding the lock and unlock buttons for 3 seconds. The vehicle will lock and then unlock and the hazard warning lights will flash twice to confirm the change. You can now unlock all doors with a single press. Repeating the procedure will re-enable Single point entry. This feature may also be set via the **Vehicle Set-up** menu (see **51, INTERACTIVE CONTROLS**).

Note: If a door or the tailgate are not opened within 1 minute of unlocking the vehicle, doors will lock again automatically.

3. Tailgate release:

Press briefly to release the tailgate. The vehicle security system will remain active while the tailgate is open, but intrusion and inclination sensing systems will be disabled.

On closing of the tailgate, the hazard warning lamps will flash after a few seconds to confirm the full alarm system has been reactivated (if previously armed). Also see **11, OPENING AND CLOSING THE TAILGATE**.

4. Panic alarm:

Press and hold for 3 seconds (or press 3 times within 3 seconds) to activate the horn and the hazard lamps. The horn and hazard lamps will switch off automatically after 2 minutes and 45 seconds.

Once active for more than 5 seconds, the alarm can be cancelled by pressing the button and holding for 3 seconds (or pressing 3 times within 3 seconds). The emergency alarm will also be cancelled if a valid Smart Key is present when the START/STOP button is pressed.

5. Approach lighting:

When approaching the vehicle during darkness, press to switch on the approach illumination. Press again to turn the approach lamps off.

The approach illumination period set at the factory is 30 seconds. This delay period may be configured to provide illumination lasting between 0 and 180 seconds. See the **Vehicle Set-up** menu **51, INTERACTIVE CONTROLS**.

Note: A replacement Smart Key can only be obtained from your Land Rover Dealer/Authorised Repairer. The Dealer will require proof of ownership.

Notify your Dealer immediately if a Smart Key is lost or stolen.

Note: The fuel filler flap can only be opened when the vehicle is unlocked.

EMERGENCY KEY



E141315

- A. Press emergency key release button and pull out side cover to release the key.
- B. Slide and remove cover to expose the emergency key.