
LUGGAGE ANCHOR POINTS

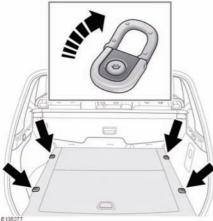

To assist in safely securing large items of luggage, four fixing points are located in the rear loadspace floor.



All items carried in the luggage area should be properly secured.

Note: A range of approved luggage retention accessories are available from your Land Rover Dealer/Authorised Repairer.