


WHEEL AND TYRE SIZES

Wheel size	Tyre size	Load index
5.5J x 19	T175/80 R19 M (temporary use spare)	122
8J x 19	255/50 R19 Y (durable spare)	107
9J x 19	255/50 R19 Y	107
9J x 19	255/50 R19 V (Saudi Arabia only)	107
9.5J x 20	275/40 R20 Y	106

ACCESSORY WHEELS AND TYRES

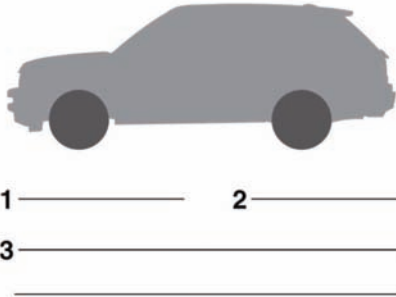

E135642

Note: Use the diagram above to record accessory wheel and tyre information.

1. Front tyre pressure.
2. Rear tyre pressure.
3. Wheel and tyre information (size, speed rating, etc.).



Contact your Land Rover Dealer/Authorised Repairer before fitting any accessory wheels and tyres.

WHEEL ALIGNMENT DATA

Supercharged Petrol and Diesel vehicles with CVD (Continuous Variable Damping)	
Wheel alignment - front	+0.15° ± 0.2°
Wheel alignment - rear	0.19° ± 0.14°
Camber - front left	-0.63° ± 0.75°
Camber - front right	-0.75° ± 0.75°
Camber - rear left	-1.0° ± 0.75°
Camber - rear right	-1.0° ± 0.75°
Castor - front left	3.96° ± 0.75°
Castor - front right	4.07° ± 0.75°

Normally Aspirated Petrol and Diesel vehicles without CVD	
Wheel alignment - front	+0.10° ± 0.2°
Wheel alignment - rear	0.19° ± 0.14°
Camber - front left	-0.63° ± 0.75°
Camber - front right	-0.38° ± 0.75°
Camber - rear left	-0.5° ± 0.75°
Camber - rear right	-1.0° ± 0.75°
Castor - front left	3.96° ± 0.75°
Castor - front right	4.07° ± 0.75°

BRAKE PEDAL TRAVEL (China)

The brake pedal travel is set at the factory and is non-adjustable.