
WHEEL AND TYRE SIZES

Wheel size	Tyre size	Load index
5.5J x 19	T175/80 R19 M	122
	(temporary use spare)	
8J x 19	255/50 R19 Y	107
	(durable spare)	
9J x 19	255/50 R19 Y	107
9J x 19	255/50 R19 V	107
	(Saudi Arabia only)	
9.5J x 20	275/40 R20 Y	106

ACCESSORY WHEELS AND TYRES

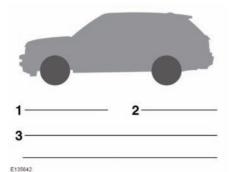

Note: Use the diagram above to record accessory wheel and tyre information.

- 1. Front tyre pressure.
- 2. Rear tyre pressure.
- **3.** Wheel and tyre information (size, speed rating, etc.).



Contact your Land Rover Dealer/Authorised Repairer before fitting any accessory wheels and tyres.

WHEEL ALIGNMENT DATA

Supercharged Petrol and Diesel vehicles with CVD (Continuous Variable Damping)			
Wheel alignment - front	+0.15° ± 0.2°		
Wheel alignment - rear	0.19° ± 0.14°		
Camber - front left	-0.63° ± 0.75°		
Camber - front right	-0.75° ± 0.75°		
Camber - rear left	-1.0° ± 0.75°		
Camber - rear right	-1.0° ± 0.75°		
Castor - front left	3.96° ± 0.75°		
Castor - front right	4.07° ± 0.75°		

Normally Aspirated Petrol and Diesel vehicles without CVD			
Wheel alignment - front	+0.10° ± 0.2°		
Wheel alignment - rear	0.19° ± 0.14°		
Camber - front left	-0.63° ± 0.75°		
Camber - front right	-0.38° ± 0.75°		
Camber - rear left	-0.5° ± 0.75°		
Camber - rear right	-1.0° ± 0.75°		
Castor - front left	3.96° ± 0.75°		
Castor - front right	4.07° ± 0.75°		

BRAKE PEDAL TRAVEL (China)

The brake pedal travel is set at the factory and is non-adjustable.