



JACKING POINTS

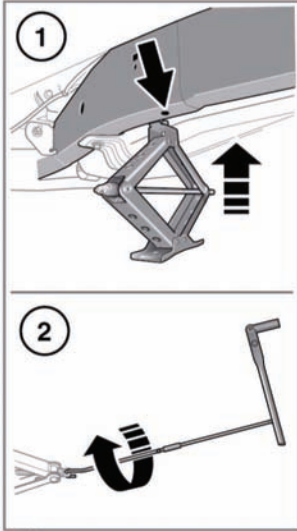

E135321

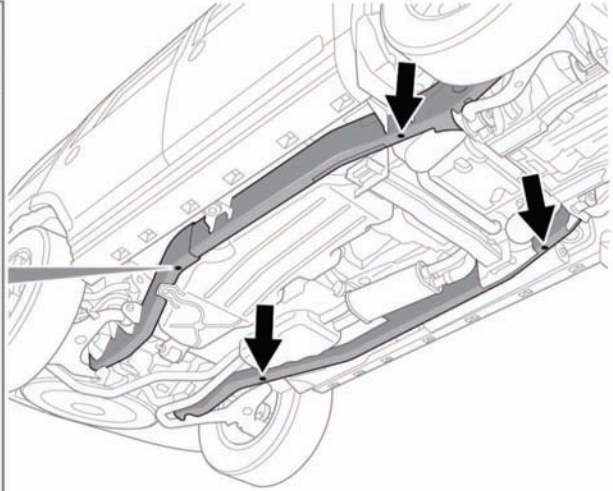

Only jack the vehicle using the jacking points described, or damage to the vehicle could occur.

Note: Your vehicle may be fitted with an alarm tilt sensor. To lock the doors while changing the wheel, and avoid the alarm activating, turn off the alarm sensors. See **Vehicle set-up menu 51, INTERACTIVE CONTROLS.**

OPERATING THE JACK



THAT NO PERSON SHOULD PLACE ANY PORTION OF THEIR BODY UNDER A VEHICLE THAT IS SUPPORTED BY A JACK.



DO NOT GET UNDER A VEHICLE THAT IS SUPPORTED BY A JACK.

1. Locate the jack under the recommended jacking point.
2. Attach the cranking lever to the jack using the adaptor. Fit the wheel nut brace to the end of the cranking lever and rotate clockwise to raise the vehicle.