


ELECTRIC SEATS

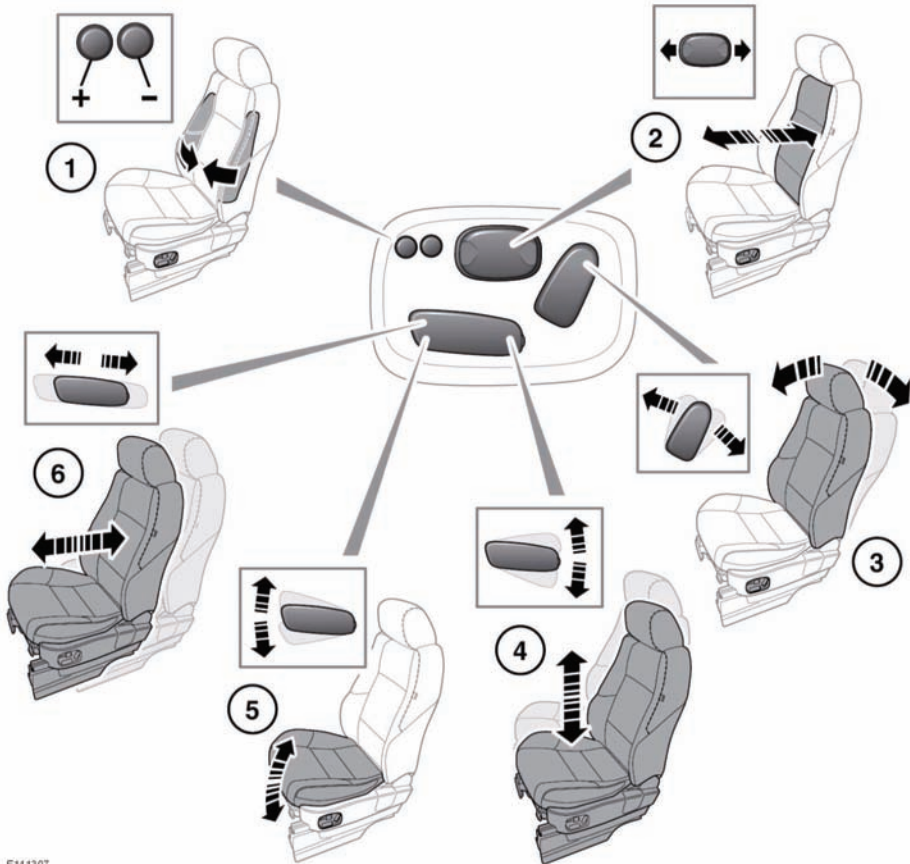

E141307



Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.

1. Bolster inflate/deflate
2. Lumbar support.
3. Backrest.

4. Height.
5. Cushion tilt.
6. Forward and rearward.

To adjust the seats, the Smart Key must be in the vehicle and the ignition switched on.