Front seats

ELECTRIC SEATS



 \triangle

Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.

- 1. Bolster inflate/deflate
- 2. Lumbar support.
- 3. Backrest.

- 4. Height.
- 5. Cushion tilt.
- 6. Forward and rearward.

To adjust the seats, the Smart Key must be in the vehicle and the ignition switched on.