


## DRIVING POSITION MEMORY

Once you have adjusted the power operated driver's seat, steering column (see **21, ADJUSTING THE STEERING WHEEL**) and exterior mirrors (see **45, EXTERIOR MIRRORS**) for your ideal driving position, the vehicle can memorise these settings for future use.

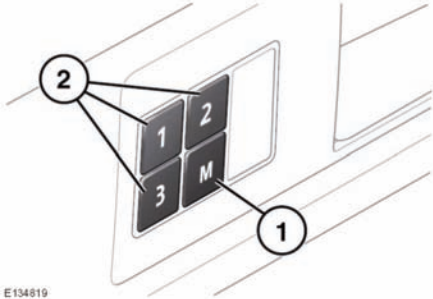

1. Press the memory store (M) button to activate the memory function.
2. Press one of the preset buttons within 5 seconds to memorise the current settings. **MEMORY (1, 2 or 3) SETTINGS SAVED** will be displayed on the message centre, accompanied by an audible chime to confirm the settings have been memorised.

**Note:** A seat position will be saved to memory only during the 5 second active period.

**Note:** Any existing settings will be over-written when a new position is saved to memory.

3. To recall a stored position press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the message centre.