


## ISOFIX ANCHOR POINTS (not Australia)

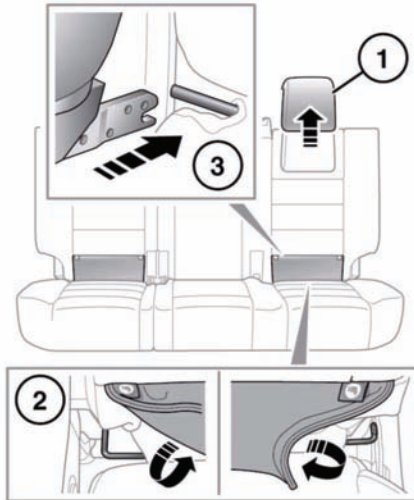

E135258

Both of the outer seat positions on the rear seat are equipped to accept ISOFIX restraints.




This symbol is shown on a label sewn into the seats to indicate the position of the ISOFIX lower anchorages.

To install an ISOFIX child seat:-

1. Raise or remove the head restraint.
2. Lift the velcro flap to expose the ISOFIX locking mechanism.
3. Slide the child seat into the locking mechanism.
4. Upper tether anchorages are provided behind the two outer rear seats.  
Lower the flap(s) covering the tether anchorages
5. Secure the tether to the tether anchorage.

**Note:** Always ensure that if an upper tether is provided, it is fitted and tightened correctly.

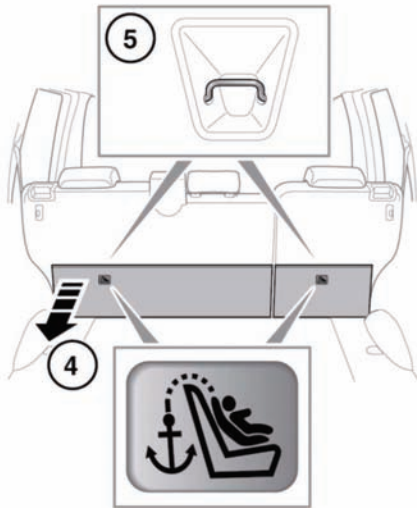

Test the security of the child restraint. To do this, attempt to pull the restraint away from the vehicle seat and twist the restraint from side to side. Even if the restraint appears secure, you should still check the anchor points visually, to ensure correct attachment.



**Do not attempt to fit ISOFIX restraints to the centre rear seating position. The anchor bars are not designed to hold an ISOFIX restraint in this position.**



**If the restraint is not correctly anchored, there is a significant risk of injury to the child in the event of a collision or emergency braking.**

**Note:** Always refit a removed head restraint after the child restraint is removed. See **19, HEAD RESTRAINT REMOVAL.**