

For information on the CD/DVD loading slot and eject button, and the use of the audio/video controls on the audio unit and steering wheel, see **108, AUDIO/VIDEO CONTROLS**.

LOADING DVDs

- ⚠ Do not force the disc into the slot.
- ⚠ Do not use irregular shaped DVDs and DVDs with a scratch protection film or self-adhesive labels attached.
- ⚠ Recordable (DVD-R or DVD+R) discs may not function correctly.
- ⚠ Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming may occur.

It is recommended that only high quality 12 cm (4.7 in.) circular discs are used.

To locate the DVD load slot and the eject button, see **108, AUDIO/VIDEO CONTROLS**.

FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option to magnify the picture.