

**Note:** Place face down on a flat surface covered in a soft material to prevent damage to the units lenses

6. To access the direction indicator, static bending lamp and side lamp, the headlamp unit locking slide assembly must be completely removed from the unit.

To remove the slide assembly, remove the 4 screws (arrowed). When refitting the slide, do not overtighten the screws.

**Note:** Refitting the headlamp unit is the reverse of removal.

## XENON LAMPS



Replacement or maintenance of Xenon lamps should only be carried out by suitably qualified personnel.



High voltage is required to ignite the gas and metal vapour which are used to power Xenon lamps. Contact with this voltage can cause serious injury.



Xenon lamp units operate at a very high temperature. Ensure that the lamp units have cooled before attempting to touch them.





Xenon lamp units contain Mercury which is highly toxic, and can be extremely harmful.



Seek advice about the correct disposal of Xenon lamp units from a Land Rover Dealer/Authorised Repairer, or your local authority.

## XENON HEADLAMP BULB REPLACEMENT

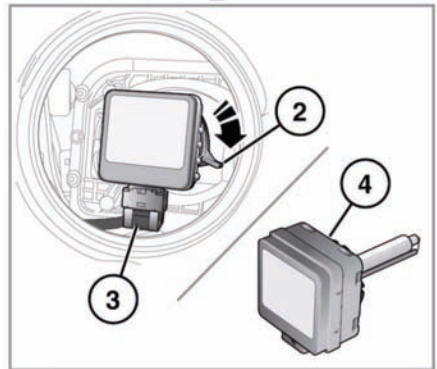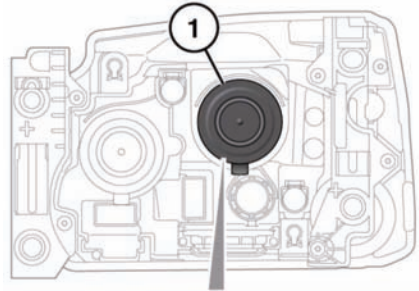

E135155

1. Twist and lift off the domed cap.
2. Rotate the collar securing the bulb to the lamp and release the bulb.
3. Pull off the electrical connector and remove bulb unit.
4. Insert the new bulb unit and reverse the above procedure. Ensure that the lugs on the cap are in contact with the bulb base.