

Operate the washer switches periodically to check that the nozzles are clear and properly directed.

1. Clean the filler cap before removing to prevent dirt from entering the reservoir.
2. Remove filler cap.
3. Top-up the reservoir until the fluid is visible in the filler neck.
4. Replace filler cap.

## CHECKING THE DYNAMIC RESPONSE FLUID LEVEL



**Dynamic response fluid is highly toxic. Keep containers sealed and out of reach of children. If accidental consumption of fluid is suspected, seek medical attention immediately.**



**If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.**



Do not start the engine if the fluid level has dropped below the **MIN** mark. Severe damage to the Dynamic response system could result.



Seek qualified assistance immediately if there is a noticeable drop in the fluid level.



If fluid loss is slow, the reservoir may be topped-up to the upper level mark to enable the vehicle to be driven to a repair facility for examination. However, it is recommended that you seek qualified assistance before driving the vehicle.



Do not attempt to drive the vehicle to a repair facility, if there is a danger that leaking fluid will come into contact with a hot surface, such as the exhaust.

Check and top-up the fluid level with the engine switched off and the system cold.



E141506

The fluid level should be maintained between the **MIN** and **MAX** marks.

## TOPPING UP THE DYNAMIC RESPONSE FLUID



Dynamic response fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.



Do not fill the reservoir above the **MAX** mark.

1. Clean the filler cap before removing to prevent dirt from entering the reservoir.
2. Remove filler cap.
3. Using the approved fluid, top up the reservoir until the fluid level is between the **MIN** and **MAX** marks. See **182, LUBRICANTS AND FLUIDS**.
4. Replace filler cap.