


## REMOTE CONTROL

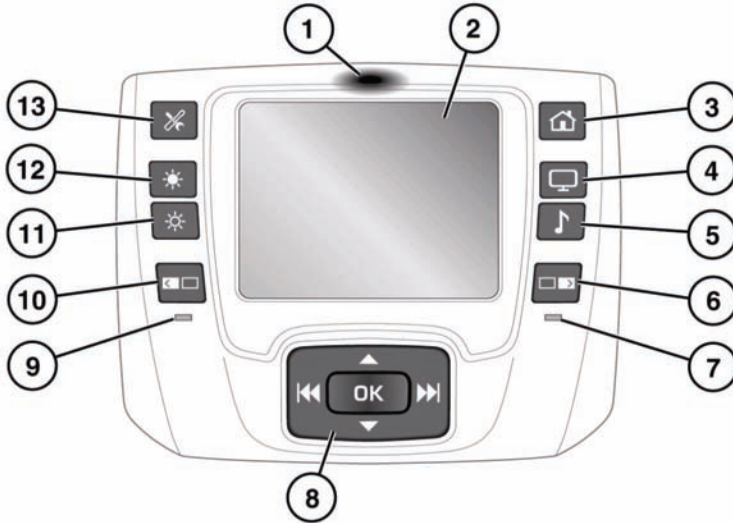

E141090

**Note:** The rear media remote control communicates via infra-red and must be pointed towards the receiver in the rear screen.

1. Press to undock remote control.
  - ⚠ Do not press the touch screen to undock the remote control.
2. Touch screen.
3. Home screen.
4. Video source.
5. Audio source.
6. Right screen select.
7. Right screen tell-tale. Illuminates when right screen has been selected.
8. Cursor movement and option select buttons.
9. Left screen tell-tale. Illuminates when left screen has been selected.
10. Left screen select.
11. Touch screen brightness decrease.
12. Touch screen brightness increase.

13. Touch screen settings.

The remote control battery is automatically recharged while the remote is docked. The battery should only be changed or removed by a Land Rover Dealer/Authorised Repairer.

### USING RSE

The system is operated using the remote control. The remote is removed from the arm rest by pressing the top of the remote to unlatch it.

- ⚠ Do not attempt to pull the remote control out of its docked position.

When the system is activated the remote control touch screen becomes active.