

The Auto trip memory also resets automatically each time the engine is started and the vehicle moves.

Trips may be added together to record a continuous journey. Press the **I** button when Auto memory figures are displayed, and

Adding previous journey will appear on the screen. Press the **I** button for longer than 1 second, and previous trip information will be added to the current trip and the cumulative total displayed.

If you wish to delete the trip you have added, again press the **I** button while displaying the Auto memory figures. Deleting previous journey will appear on the screen. While this message is displayed, press and hold the **I** button for longer than 1 second. The previous trip will be deleted from the total.

TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

METRIC/IMPERIAL/MIXED DISPLAY

The trip computer readings can be changed between metric, imperial and mixed units in the **Trip Computer** menu of the Driver information centre. See **51, INTERACTIVE CONTROLS**.

Note: *Temperature display can be changed between °C (Celsius) and °F (Fahrenheit) independently of Metric or Imperial units.*

SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Driver information centre, as either a distance or time left until service is due. Once the distance or time are exceeded, the display will show a negative value (-) to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.