

The Auto trip memory also resets automatically each time the engine is started and the vehicle moves.

Trips may be added together to record a continuous journey. Press the **I** button when Auto memory figures are displayed, and **Adding previous journey** will appear on the screen. Press the **I** button for longer than 1 second, and previous trip information will be added to the current trip and the cumulative total displayed.

If you wish to delete the trip you have added, again press the **I** button while displaying the Auto memory figures. Deleting previous journey will appear on the screen. While this message is displayed, press and hold the **I** button for longer than 1 second. The previous trip will be deleted from the total.

### TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

### RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

### METRIC/IMPERIAL/MIXED DISPLAY

The trip computer readings can be changed between metric, imperial and mixed units in the **Trip Computer** menu of the Driver information centre. See **51, INTERACTIVE CONTROLS**.

**Note:** *Temperature display can be changed between °C (Celsius) and °F (Fahrenheit) independently of Metric or Imperial units.*

### SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Driver information centre, as either a distance or time left until service is due. Once the distance or time are exceeded, the display will show a negative value (-) to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.