## Camera systems

## SURBOUND CAMERA SYSTEM

The camera home page is accessed from the **Home menu** screen. If Cameras has not been set as a short cut, touch **Extra Features** to display the list.

With the engine running and Park or Neutral selected, the surround camera system uses 5 discretely placed cameras to assist in manoeuvring the vehicle.



- E141447
- 1. Enlarge: To enlarge a camera view, touch the image then touch the Enlarge soft key. Any 2 images can be selected and enlarged to view side-by-side on the screen.
  - When viewing the two images, one of them can be selected to view as a full screen image. It can then be zoomed into and panned around using the magnifier and arrow icons.
- 2. **Proximity View:** Touch to select a combination of 3 images from the front and passenger side cameras.

Automatic Proximity View: - Japan only: When Drive or Reverse is selected, the forward or rear view will be displayed. Once the vehicle speed 18 km/h (11 mph) or the return icon is pressed, the camera screen will disappear.

**Note:** Proximity view can be accessed at any time by touching Proximity View on the Camera home page.

- Special Views: A selection of pre-set views can be displayed by selecting Special Views. They are provided to assist with difficult manoeuvres and are:
  - Kerb view: Shows views from the 2 front cameras.
  - **Junction view:** Shows views from the 2 side cameras.
  - Trailer view: Shows the rear camera view.
- 4. Camera Setting Japan only: Touch to access the camera options page. To deactivate the Semi-auto camera functionality select Off. The Proximity view is now only accessible by manual activation using the Proximity View soft key.
- **5. Tow Assist:** Touch to display trailer guidance set-up screen.