


AIRBAGS

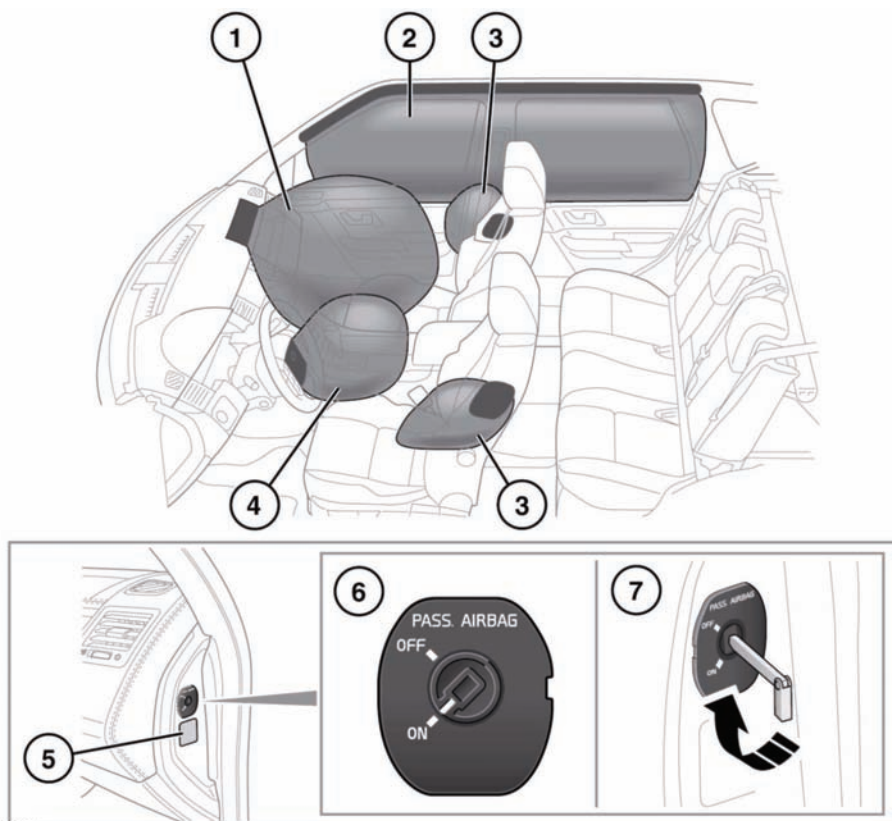

1. Passenger front airbag.
2. Curtain airbag.
3. Side airbags.
4. Driver's front airbag.
5. Passenger airbag warning label
6. Passenger airbag disable switch location
7. Passenger airbag disable switch operation.

Note: The general location of airbags fitted to the vehicle are marked by the word AIRBAG.

Always contact your Dealer/Authorised Repairer if:

- An airbag inflates.
- The front or sides of the vehicle are damaged.
- Any part of the airbag system shows signs of cracking or damage, including trim covering airbags.
- the amber airbag warning lamp illuminates.

The passenger front airbag can be disabled using the passenger airbag disable switch.