

# Wipers and washers

In vehicles not fitted with a rain sensor, the frequency of intermittent wipe adjusts according to vehicle speed.

The intermittent delay period can be adjusted via the collar (1), but will also reduce automatically as vehicle speed increases.



This feature can be enabled or disabled by your Dealer/Authorised Repairer.

Switching the headlamps or ignition off and back on again, will reset the cycle.

**Note:** *The headlamp washers are inhibited when the washer fluid reservoir level is low.*

## RAIN SENSOR



Ensure that the wipers are switched off before entering a car wash. If the rain sensitive wipers operate during the car washing process, damage may occur to the wiper mechanism.

The rain sensor is able to detect the presence and amount of rain/dirt/snow on the windscreen and automatically activates the windscreen wipers accordingly. Static droplets may not be detected on initial start-up, use a single wipe to clear the screen.

To activate the rain sensitivity wipers, move the wiper stalk to the rain sensor position (4) and adjust the rain sensitivity control (1) as required. When rain sensitive wipers are activated and when sensitivity is increased, a single wipe will operate.

## HEADLAMP WASHERS

If the headlamps are on, and there is sufficient liquid in the washer reservoir, operating the screen wash will also power-wash the headlamps.

The headlamp power wash will operate on every fifth operation of the screen washer, provided the headlamps are still switched on and approximately 10 minutes have elapsed since the last headlamp wash.