

8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or previous chapter of the video media.

Note: For information on the use of the audio/video controls on the audio unit and steering wheel, see **106, AUDIO/VIDEO CONTROLS**.

LOADING DVDs

NOTICE

Do not force the disc into the slot.

NOTICE

Do not use irregular shaped DVDs and DVDs with a scratch protection film or self-adhesive labels attached.

NOTICE

Recordable (DVD-R or DVD+R) discs may not function correctly.

NOTICE

Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming may occur.

It is recommended that only high quality 4.7 in. (12 cm) circular discs are used.

To locate the DVD load slot and the eject button, see **106, AUDIO/VIDEO CONTROLS**.

FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option to magnify the picture.