

## WARNING AND INFORMATION MESSAGES

### ⚠ WARNING

Do not ignore warning messages. Take appropriate action and, when necessary, seek qualified assistance before driving the vehicle. Failure to do so could result in failure of vehicle systems potentially causing loss of control and an accident.

For information regarding the individual messages, their meanings, and any action required, please refer to the relevant section within this handbook.

If more than one message is active, each is displayed in turn for 2 seconds in order of priority.

**Note:** Messages are displayed in order of importance, with critical warning messages being the highest priority.


Warning messages are accompanied by an audible warning, and the message text may have the handbook symbol next to it. Warning messages are displayed until the condition causing the fault is rectified or the message is suppressed using the **OK** button on the steering wheel. If the message is suppressed, a warning icon will remain illuminated until the cause of the message is rectified.

## TRIP COMPUTER

The computer memory stores data for a journey or series of journeys until it is reset to zero. The displayed information is for guidance only, as it can be affected by traffic, road and weather conditions.

There are 3 trip memories available, A, B and Auto. You can specify which trip memory is viewable using the **i** button.

## USING THE TRIP COMPUTER

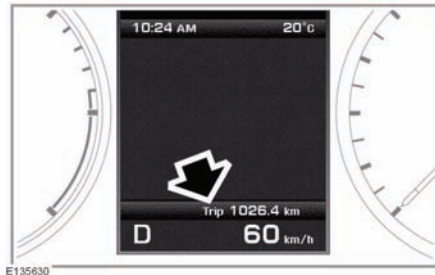

A short press (1 second or less) or a series of short presses of the **i** button will change the trip computer display. The options available are:

- Date and Odometer.
- Trip distance.
- Trip average speed.
- Trip average fuel consumption.
- Instantaneous (short term average) fuel consumption.
- Range available from remaining fuel.
- Blank display.

To reset the trip computer values to zero, press and hold the **i** button for 2 seconds.

To reset the fuel consumption figure, press and hold the **i** button until the display clears.

To reset trip A or trip B memory, display the trip memory you wish to reset, then press and hold the **i** button until the message **Resetting Trip A** or **B** is displayed. Continue to hold the button for another 2 seconds to reset the Auto trip memory.