

## ENGINE COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	Diode	-	Engine management supply
2	5	tan	Voltage module supply
3	80	-	Cooling fans
4	60	-	Diesel - Glow plugs
5	80	-	Electric power assisted steering
6	15	blue	Oxygen sensors
7	5	tan	Engine management, A/C clutch
8	20	yellow	Diesel and Petrol - Engine management control unit
9	10	red	Diesel - Engine sensors
10	20	yellow	Automatic transmission
11	10	red	Diesel and Petrol - Engine sensors
12	15	blue	Diesel - EGR bypass Petrol - Ignition coils
13	10	red	A/C clutch
14	15	blue	Diesel - Engine sensors
15	40	green	Starter motor
16	100	-	PTC heater
17	60	-	Passenger compartment fuse box
18	60	-	Passenger compartment fuse box
19	60	-	Luggage compartment fuse box
20	60	-	Luggage compartment fuse box
21	60	-	Voltage module supply
22	30	pink	Front wipers
23	40	green	Passenger compartment fuse box
24	-	-	Not used
25	30	pink	Anti lock braking system
26	40	green	Anti lock braking system
27	40	green	Passenger compartment fuse box
28	40	green	Heater blower
29	30	pink	Electric trailer brake -Australia

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
30	15	blue	Headlamp washer
31	15	blue	Horns
32	20	yellow	Auxiliary heater
33	5	tan	Relay coils - Horn, Heated front screen, Fuel pump
34	40	green	LH Heated front screen
35	40	green	RH Heated front screen
36	5	tan	Auxiliary water pump
37	20	yellow	Fuel pump
38	-	-	Not used
39	-	-	Not used
40	5	tan	AFS (RH) headlamp
41	5	tan	AFS (LH) headlamp
42	5	tan	Headlamp control, Dynamic headlamp levelling control unit
43	5	tan	High beam assist, rear view camera,
44	10	red	Heated steering wheel
45	5	tan	Diesel - Auxiliary water pump, water in fuel sensor