


## STANDARD PORTABLE MEDIA CONTROLS

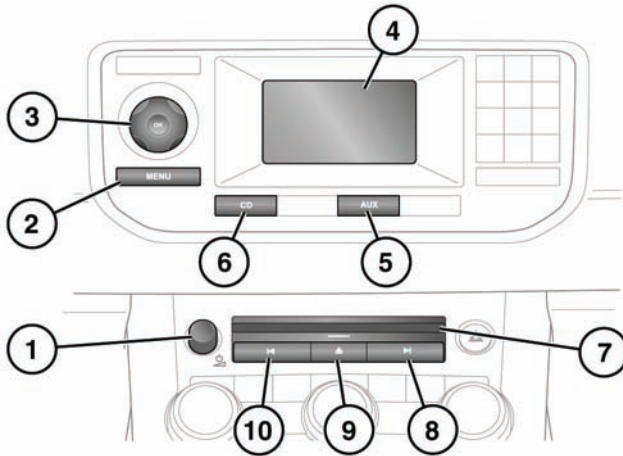

SL2121

1. Press to switch on/off. Rotate to adjust volume level.
2. **MENU** button:
  - Audio settings
3. **OK** and navigation control.  
Use to move any menu cursor/highlight up, down, left or right. When the required option is highlighted, press **OK** to select.
4. Audio Information display.
5. **AUX** input select. Use when a portable device is connected.
6. **CD** menu.
7. CD loading slot.
8. Seek up:
  - Short press:
    - to select the next track on chosen audio source.
  - Long press:
    - to scan forward through a CD track or MP3 folder.
9. CD eject button.
10. Seek down:
  - Short press:
    - to select the previous track on chosen audio source.
  - Long press:
    - to scan backward through a CD track or MP3 folder.