

- ❗ **RES (2)** should be used only if the driver is aware of the set speed and intends to return to it.
- ❗ It is not recommended to resume set speed when a low gear is selected as excessive engine speeds will occur.

### AUTOMATIC SWITCH OFF

Cruise control will switch off but the set speed will remain in the memory when:


- The **CAN** button **(3)** is pressed.
- The brake pedal is pressed.
- Speed falls below 30km/h (18mph).
- Neutral, Park or Reverse gear is selected on vehicles with automatic transmission.
- Dynamic Stability Control is operating.
- The difference between the actual and set speed is too great.
- The vehicle reaches a speed of 170 km/h (105 mph).
- The accelerator pedal is used to accelerate beyond the set speed for more than 60 seconds.

Cruise control will switch off and clear the memory when:

- The ignition is switched off.
- A fault occurs. The cruise control system will switch off and cannot be used until the fault is cleared.

### CRUISE ECO DATA

Diesel only

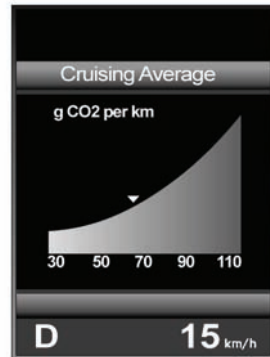

SL2123

When enabled, a CO<sup>2</sup> emission indicator is displayed in the message centre. The higher the numeric reading, the more CO<sup>2</sup> is being emitted and the more fuel is being used. See **59, VEHICLE INFORMATION AND SETTINGS MENU**.