

**Note:** As the TV system is continually checking the availability of channels, it is possible for a channel to be in the list, but not actually available (e.g. when driving through different transmitter regions).

**Note:** After a country format change, the channel list will be empty until the system has scanned all channels at least once.

## 7. TV channel presets:

- Touch and hold to store the current channel as a preset. The channel name will then be displayed on the soft key.
- Briefly touch to select the channel stored on that preset.

**Note:** Stored presets contain information identifying the country where the preset was stored. When a preset is selected, the TV format of the country where the preset stored will be adopted. As analogue TV formats differ in different countries, this may create a situation where the analogue channel list is empty.

For information on the use of the audio/video controls on the audio unit and steering wheel, see **112, TOUCH SCREEN AUDIO/VIDEO CONTROLS.**

## FULL SCREEN VIEW CONTROLS

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

**Display format:** Use the relevant soft key to select the **16:9, Zoom** or **4:3** option.

**Digital TV display format:** The picture can be displayed in either the correct format as transmitted by the broadcaster (either **4:3** or **16:9**) or select **Zoom** to magnify the picture.

## TV/MY VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **TV/My video** screen and the relevant safety message will be displayed. If Dual view is fitted, a prompt for the passenger to activate dual view is displayed. See **133, DUAL VIEW TOUCH SCREEN.**