


CONTROLS (FRONT TOUCH SCREEN)

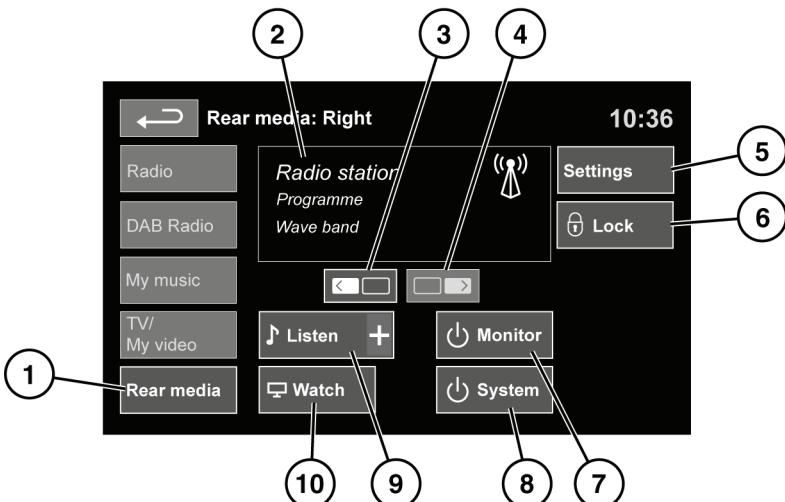

SL1870

See 108, TOUCH SCREEN HOME MENU.

1. Select rear media.
2. Current rear media display.
3. Left screen select.
4. Right screen select.
5. Settings menu.
6. Remote control lock. Touch to prevent selections being made from the remote control.
7. Turns the selected screen on/off.
8. Rear media on/off, for the selected user.
9. Audio source select.
10. Video source select.

USING THE REAR MEDIA

Rear media consists of two screens. Separate programmes can be viewed or heard by rear seat occupants. Supervisory control is made from the front screen. Audio and video programmes for each or both sides of the rear media, can be selected from the Supervisor screen. The remote control can be locked out. While the Supervisor screen is displayed, the remote control will be locked out.

⚠ The passenger entertainment system should be used only when it is safe to do so. Do not use if it is likely to cause driver distraction. Driver distraction can lead to accidents causing serious injury or death.

⚠ Always run the engine during prolonged use of the RSE system, otherwise, the vehicle battery may become discharged.