










WHEEL CHANGING SAFETY

Before raising the vehicle or changing a wheel, ensure that you read and comply with the following warnings.

-  **Always find a safe place to stop, off the highway and away from traffic.**
-  **Ensure that the vehicle is on firm level ground.**
-  **Apply the parking brake. Engage Park (P) on automatic vehicles, select 1st or reverse gear on manual vehicles.**


-  **Switch on the hazard warning lamps.**
-  **Ensure that the front wheels are in the straight ahead position and engage the steering lock.**
-  **Disconnect trailer/caravan from vehicle.**
-  **Ensure that all passengers, and animals, are out of the vehicle and in a safe place away from the highway.**
-  **Place a warning triangle at a suitable distance behind the vehicle, facing towards oncoming traffic.**

TOOL KIT

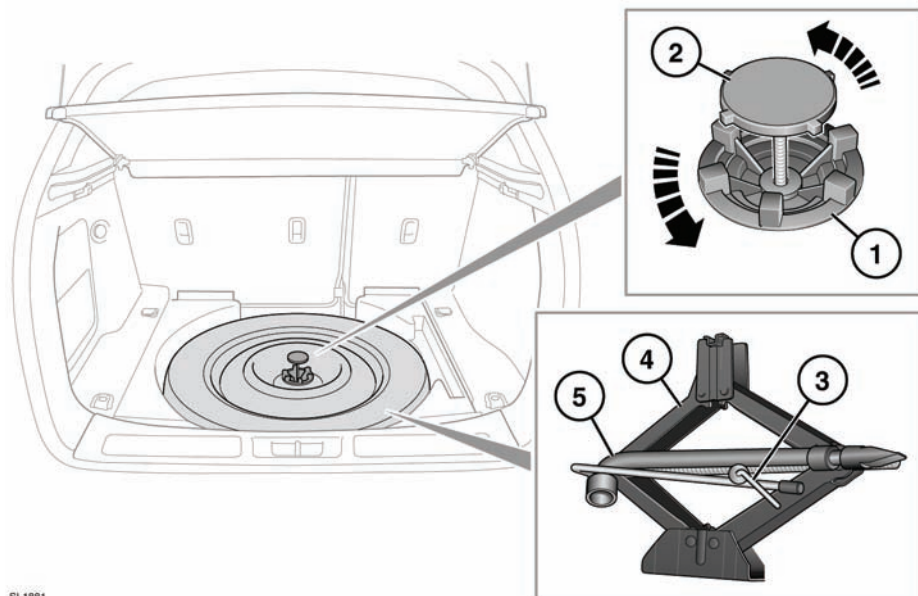

- 1. Temporary spare wheel locking ring.
- 2. Temporary spare wheel retaining bolt.
- 3. Tool kit retaining bolt.
- 4. Jack.

- 5. Wheel brace.

 **After use, the tool kit should be returned to the storage area and correctly stowed.**

SL1881