
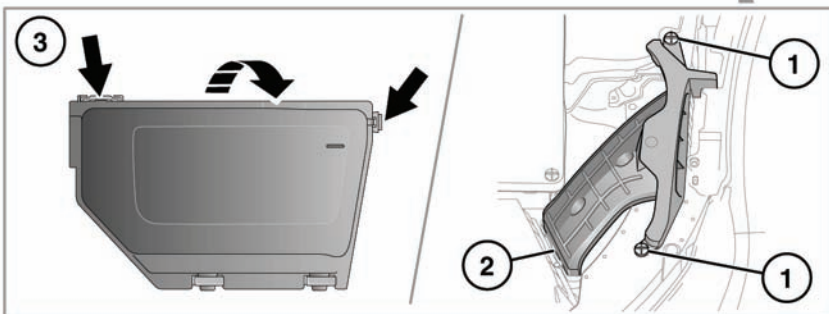
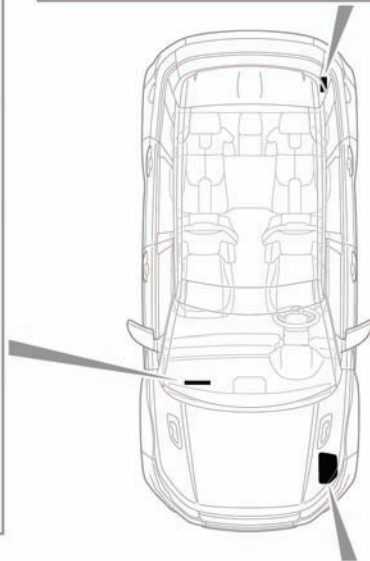
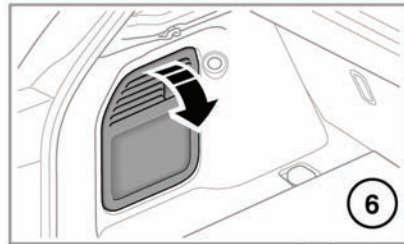


## FUSE BOX LOCATIONS

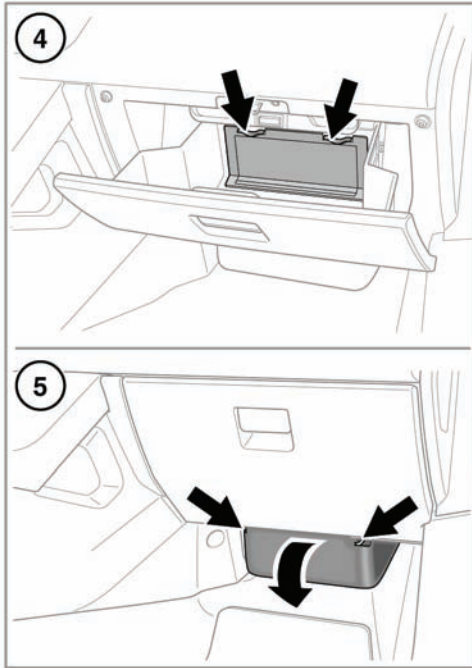

SL1770