

## HEATED SCREENS

Press to operate the required screen heater. The screen heater(s) will operate for a predetermined timed period before automatically switching off.



- Do not attach labels to the rear screen.
- Do not scrape or use abrasive materials to clean the inside of the screen.

## HEATED SEATS

Press the relevant button to operate the required seat heater at high level. Three indicators will illuminate.

Press a second time to heat the seat at a medium level. Two indicators will illuminate.

Press a third time to heat the seat at the lowest level. One indicator will illuminate.

Press a fourth time to switch off.

**Note:** *Seat heaters consume a great amount of battery power. They will operate only when the engine is running.*

## RECIRCULATION

- Press briefly to activate timed recirculation. The button indicator illuminates when recirculation is on.
- Press and hold the button to activate latched (continuous) recirculation. The button indicator will flash and then illuminate constantly.
- To cancel recirculation, press the button briefly.

**Note:** *Prolonged use at low temperatures may cause the windows to mist.*

### With pollution and humidity sensing;

- Press the AUTO button briefly to activate timed recirculation. The AUTO LED will illuminate. The system automatically selects fresh and recirculated air

dependent on pollution and cabin humidity.

- Press and hold the AUTO button to activate latched (continuous) recirculation. The AUTO LED will flash and then illuminate constantly.
- Press the MAN button briefly. The MAN LED will illuminate. Recirculation mode is selected permanently.
- To cancel recirculation, press the button briefly.

## WATER DEPOSITS

The climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and is no cause for concern.

## AUXILIARY HEATER

Your vehicle may be fitted with an auxiliary heater which is powered by fuel drawn from the vehicle's tank. The heater operates only at low ambient temperatures and is controlled by the Timed climate control system or the heater remote control.

When the heater is operating, exhaust fumes from the heater may be visible under the front of the vehicle. This is normal and not a cause for concern.

The auxiliary heater is also operated to warm the engine and aid starting in very cold conditions.

**Note:** *While the engine is being warmed, heat will not be directed to the vehicle interior.*

**Do not operate the auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust causing a fire/explosion.**