

BATTERY CHARGE (RED)

Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp remains on or illuminates while driving, there is a fault with the battery charging system.

Seek qualified assistance urgently.

SEAT BELT (RED)

Illuminates when the ignition is on and an occupied front seat belt is unbuckled. The lamp will extinguish after 60 seconds or when the relevant seat belt is buckled. In some markets a warning chime will sound while the lamp is illuminated.

Note: *In some markets, the lamp will remain illuminated until the seat belts of occupied front seats are fastened correctly.*

ENGINE MALFUNCTION (AMBER)

Illuminates briefly when the ignition is switched on. If the lamp flashes or illuminates at any other time, there is a fault with the engine.

Avoid high speeds and seek qualified assistance urgently.

GENERAL WARNING/INFORMATION MESSAGE (AMBER)

Illuminates when a non-critical warning message or an information message is available in the message centre.

BRAKE (AMBER)

Illuminates briefly when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system. The vehicle can still be driven with care, but avoid heavy brake application.

Seek qualified assistance urgently.

DYNAMIC STABILITY CONTROL (DSC) (AMBER)

Flashes when DSC is active.

If there is a fault, this warning lamp will illuminate in the instrument panel and the message centre will display **DSC NOT AVAILABLE**.

The vehicle can still be driven, but the DSC system will not activate under wheel spin or slide conditions.

Seek qualified assistance as soon as possible.

DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)

Illuminates when DSC is switched off. A chime will also sound and the message **DSC OFF** is displayed in the message centre.

If Trac DSC is selected, the warning lamp will also illuminate and the message **TRAC DSC** is displayed for 4 seconds.