

## Warning lamps

### ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application.

Seek qualified assistance urgently.

### AIRBAG (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp illuminates while driving, there is a fault with the airbag system.

Seek qualified assistance as soon as possible.

### ADAPTIVE FRONT LIGHTING (AMBER)



Illuminates when there is a fault. The headlamps will still operate, but without this feature operating correctly.

Seek qualified assistance as soon as possible.

### REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

### GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on to indicate that the glow plugs are active. Wait until the lamp extinguishes before starting the engine.

### EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

### TYRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while driving, one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

### HILL DESCENT CONTROL (GREEN)



Illuminates when HDC is selected and HDC operating conditions are met. If the lamp flashes, HDC has been selected, but the operating conditions are not being met (e.g. vehicle speed is too high) or HDC fade-out is occurring.

### CRUISE CONTROL (GREEN)



Illuminates when cruise control is active.

### SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

### FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

### DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.