

5. Press and hold the HomeLink opener button and observe the indicator lamp.
  - If the indicator is continuous, programming is complete and your device should operate when the HomeLink opener button is pressed and held for approximately 1 to 2 seconds and then released.
  - If the indicator lamp blinks rapidly for two seconds and then illuminates continuously, proceed with the following programming instructions for rolling code device equipment.

## ROLLING CODE DEVICE EQUIPMENT PROGRAMMING

**Note:** *The assistance of a second person, may make the following steps quicker and easier. Once the button has been pressed there are only 30 seconds in which to complete Step 3.*

1. At the garage door opener receiver (motor head unit) in the garage, locate the learn or smart button/switch.
  - The name of the button or switch may vary between manufacturers.
2. Press and release the learn or smart button.
3. In your vehicle, firmly press the previously programmed HomeLink opener button twice and release.
4. Press and hold briefly to complete the programming process.

HomeLink should now activate the rolling code device.

## REPROGRAMMING A SINGLE GARAGE DOOR OPENER BUTTON

To programme a device to a previously programmed button:

1. Press and hold the desired pre-programmed HomeLink button for at least 20 seconds, but no longer than 30 seconds, until the indicator lamp begins to flash.
2. Without releasing the button, position the hand-held transmitter approximately 50 to 150 mm (2 to 6 in) away from the HomeLink transceiver, keeping the indicator lamp in view.
3. Carry out Step 3 of **Programming**.

## TO ERASE ALL PROGRAMMING

For first time programming, ensure that the engine is switched off:

1. Ensure that the ignition is on (but with the engine switched off).
2. Press and hold the two outer HomeLink buttons. Keep the buttons pressed until the indicator lamp begins to flash (this will take approximately 20 seconds), then release the buttons.

All memories in HomeLink have now been cleared.

**Note:** *Do not perform this procedure when programming the additional garage door opener buttons.*

## ENTRY GATE PROGRAMMING

The technology of some entry gates requires you to press and re-press (cycle) the hand-held transmitter button every 2 seconds during programming.