

*Park assist can be reactivated by pressing the Park assist button. While a vehicle with automatic transmission will resume the previous parking manoeuvre, a vehicle with manual transmission will not.*

7. If further manoeuvring is required in the parking space, select forward / reverse gear and continue to follow instructions.
8. When the parking manoeuvre is completed, STOP will be displayed.

## **PARK ASSIST SYSTEM FAULT**

If a system fault is detected, a continuous tone will sound and a message will be displayed in the message centre. Contact your Dealer/ Authorised Repairer as soon as possible.