

Enter a memorable four digit Personal identification Number (PIN). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, select **Delete**.

If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

**Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the Valet mode On screen is displayed.

#### **Deselection:**

When you re-enter the vehicle, touch the Valet button to view the Valet mode screen.

Enter your four digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The touch screen will be enabled.

**Note:** *If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*

## **EXTRA FEATURES**

There are more features available than can be displayed at one time. This menu allows the selected features to be displayed, for example:

- **Ambient lighting:** While the headlamps are turned on, select this feature to turn ambient lighting on or off. Adjust the lighting level to suit. Adjusting to the minimum level will turn ambient lighting off. Selecting Auto allows the vehicle to control when and how ambient lighting is used.

Extra features are displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.

## **TOUCH SCREEN CARE**



Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/Authorised Repairer.

The touch screen and inner bezel must be kept clean to maintain optimum performance. Clean finger marks with a soft cloth and Land Rover approved cleaning agent. Contact your dealer for details.

Avoid exposing the screen to direct sunlight for long periods.

When operating touch screen soft keys, use only one finger. Using more than one finger at a time may cause false inputs.