






Sport mode, pull and hold the upshift (+) paddle for approximately 1 second. To return to Drive mode, move the selector back to the **D** position.

- The selected gear will be displayed in the message centre.


-  Do not allow the vehicle to remain stationary for a sustained period, with a gear selected and the engine running.
-  This vehicle must not be push or tow started.

PARK

Use when the vehicle is parked. The transmission will be locked.

-  **Park (P) or Neutral (N) should be engaged and the parking brake applied when the vehicle is stationary.**
-  **Always select P and switch off the ignition before leaving the vehicle.**
-  Never select Park (**P**) when the vehicle is in motion.

REVERSE

-  Never select Reverse (**R**) when the vehicle is in forward motion.

Before selecting reverse gear, ensure the vehicle is stationary and the brakes are applied.


Rotate to **R**.

NEUTRAL

Disconnects drive to the wheels. Use the parking brake while **N** is selected.

Do not use for vehicle recovery purposes.

DRIVE

-  Never select a forward gear when the vehicle is in rearward motion.

Gear changing is fully automatic. Shift points are determined by accelerator pedal position and current road speed.

SPORT

The transmission will stay in the lower gears for longer, improving mid-range performance. To deselect Sport mode, move the selector back to **D**.

COMMANDSHIFT™

With Sport mode selected, use the gearshift paddles to change gear. CommandShift can be effective when rapid acceleration and engine braking are required.

Transmission Commandshift Selected will appear in the message centre when the transmission is in CommandShift mode.

To return to Sport mode after CommandShift has been selected, move the selector back to **D** then back to Sport mode.

***Note:** In order to protect the engine, the transmission will automatically change up to prevent over-revving, or down if the engine is labouring.*

KICK-DOWN

Push the accelerator pedal fully down to achieve rapid acceleration in automatic mode. When the pedal is relaxed, normal gear changing will resume.

ROTARY DRIVE SELECTOR

P should normally be selected before switching off the engine. If any other gear is selected at turn off, the selector will move to **P** before retracting into the centre console.