

Sport mode, pull and hold the upshift (+) paddle for approximately 1 second. To return to Drive mode, move the selector back to the **D** position.

- The selected gear will be displayed in the message centre.

-  Do not allow the vehicle to remain stationary for a sustained period, with a gear selected and the engine running.
-  This vehicle must not be push or tow started.

## PARK

Use when the vehicle is parked. The transmission will be locked.

-  **Park (P) or Neutral (N) should be engaged and the parking brake applied when the vehicle is stationary.**
-  **Always select P and switch off the ignition before leaving the vehicle.**
-  Never select Park (**P**) when the vehicle is in motion.

## REVERSE

-  Never select Reverse (**R**) when the vehicle is in forward motion.

Before selecting reverse gear, ensure the vehicle is stationary and the brakes are applied.

Rotate to **R**.

## NEUTRAL

Disconnects drive to the wheels. Use the parking brake while **N** is selected.

Do not use for vehicle recovery purposes.

## DRIVE

-  Never select a forward gear when the vehicle is in rearward motion.

Gear changing is fully automatic. Shift points are determined by accelerator pedal position and current road speed.

## SPORT

The transmission will stay in the lower gears for longer, improving mid-range performance. To deselect Sport mode, move the selector back to **D**.

## COMMANDSHIFT™

With Sport mode selected, use the gearshift paddles to change gear. CommandShift can be effective when rapid acceleration and engine braking are required.

**Transmission Commandshift Selected** will appear in the message centre when the transmission is in CommandShift mode.

To return to Sport mode after CommandShift has been selected, move the selector back to **D** then back to Sport mode.

***Note:** In order to protect the engine, the transmission will automatically change up to prevent over-revving, or down if the engine is labouring.*

## KICK-DOWN

Push the accelerator pedal fully down to achieve rapid acceleration in automatic mode. When the pedal is relaxed, normal gear changing will resume.

## ROTARY DRIVE SELECTOR

**P** should normally be selected before switching off the engine. If any other gear is selected at turn off, the selector will move to **P** before retracting into the centre console.