

Additionally, double locking also activates the full alarm system with intrusion sensing (market dependent) and tilt sensing. When the vehicle is Double locked the alarm will sound if:

- The bonnet, tailgate or a door is opened.
- Movement is detected within the vehicle interior.
- A window, front or rear screen or panoramic sunroof glass is broken.
- The vehicle is raised or tilted.

In some markets where a battery backed sounder is fitted the following actions will also sound the alarm:

- The vehicle battery is disconnected.
- An attempt is made to disconnect the alarm siren.

**Note:** *In this state, an open window may cause the alarm to sound due to the movement of air currents. For this reason, ensure all windows are fully closed before double locking the vehicle.*

### LOCK CONFIRMATION

If you are uncertain whether the vehicle is locked and armed (either by single or double locking), press either the Smart Key lock button or, if Keyless entry is fitted, touch an exterior door handle lock sensor. The hazard warning lamps will flash once to indicate and confirm the current lock status.

**Note:** *If the vehicle is **not** already locked and armed, pressing the lock button will single lock the vehicle. Press again to double lock, if required.*

### AUTOMATIC RELOCKING AND ARMING OF THE ALARM

If a door, tailgate or bonnet are not opened within 40 seconds of unlocking the vehicle via the Smart Key, all doors will re-lock automatically to the previous locked state and the alarm will re-arm.

### MISLOCK

When locking the vehicle with the Smart Key, if one or more of the doors, the bonnet or the tailgate is not fully closed, or the ignition is ON, the vehicle will NOT lock and there will be an audible mislock error warning. The hazard warning lamps will NOT flash and the door mirrors (if enabled) will NOT fold in. Check that all doors, the bonnet and the tailgate are closed properly. Ensure the ignition is turned OFF and lock the vehicle again. If the mislock persists, consult a Land Rover Dealer/Authorised Repairer.

### GLOBAL CLOSING



**Ensure that no children, pets, or obstructions are in any open aperture before operating global closing.**

Ensure that all doors are closed. Press and hold the Smart Key lock button for three seconds. The vehicle will single lock and the alarm will be armed immediately. After three seconds any open windows will be closed.