

⚠ Do not operate the auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes which may cause unconsciousness or death.

TIMED CLIMATE CONTROL

Timed climate can provide a comfortable temperature inside the cabin in advance of driver and passenger entering. Dependent on the external temperature, the system either draws in fresh air to cool the cabin or operates an auxiliary heater to warm it.

Control is from the touch screen or from a remote control.

SETTING A TIME FOR TIMED CLIMATE OPERATION


Via the touch screen;

The touch screen can be used to either preset activation times or to operate the system manually.

The system can be programmed to operate up to seven days in advance and once or twice in any 24 hour period. If the vehicle is used each day the system will continue to operate each day until cancelled. If the vehicle is not used for 24 hours, this cycle will be cancelled.

When the system is operating, the LED in the climate control **AUTO** button will flash.

Note: The system will cease operation if the engine is started.

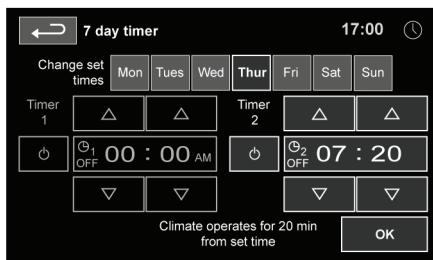

SL2122

To set a timed climate program:

1. Press the **HOME MENU** hard key.
2. Touch the **Timed Climate** soft key. This soft key may be set on a personal shortcut or accessed via the **Extra Features** soft key. Select the day for which you want to set a programme or select **All Week** to select the same start time for every day.
3. Touch the Timer 1 or Timer 2 icon. The timers can be toggled between on and off using the power soft key.
4. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
5. Touch **OK**.

The screen will display the activation time. If required, set the time for the other timer using the same process.


Note: The time format, 12/24 hour clock, is determined by the time settings currently selected in the **System settings** menu. **59, VEHICLE INFORMATION AND SETTINGS MENU**

A current timed climate cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant **Power** soft key on the timer set up menu or the **Power** soft key on the **Timed Climate** information home menu.

Via the remote control;

The dedicated remote control has a range of approximately 100 m (330 ft). Press and hold the **ON** button for two seconds.

Note: Avoid touching the antenna when operating the **ON** or **OFF** button.

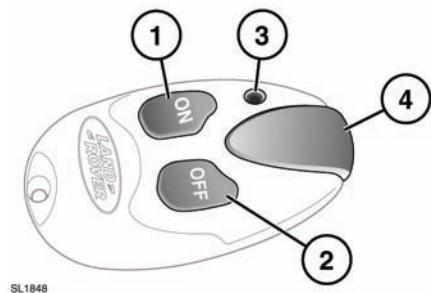

1. On button.
2. Off button.
3. LED (operation indicator).
4. Antenna.

Press and hold the **ON** button for approximately two seconds. The green LED will illuminate for two seconds to confirm that a program has been initiated. The LED flashes once every two seconds to indicate that the program is active.

The timed climate program will continue for 20 minutes and then switch off automatically to prevent the vehicle battery from discharging. It also turns off automatically if the engine is started.

The system may not operate, or will switch off automatically, if:

- Fuel level is low.
- The vehicle's battery charge is low.
- Engine coolant temperature is at or above its required temperature.
- The engine has not been started since the last programme cycle.

The remote control LED indicator signals other states and conditions for the timed climate as follows:

- Illuminates red for two seconds when the **OFF** button is pressed, to indicate that the program has stopped.
- Flashes green or red for two seconds then stops when the **ON** or **OFF** buttons are pressed, to indicate that no action has been taken.
- Illuminates orange for two seconds before showing green or red, to indicate that the remote battery is low.
- Flashes orange for five seconds to indicate that no action has been taken and the remote battery should be replaced.