## Heating and ventilation

## REPLACING THE BATTERIES



With the back of the remote control facing upwards, use a coin or similar implement to rotate the battery cover. Lift the cover off to reveal the battery compartment. Remove the old battery and, ensuring that the correct polarity is maintained, insert a replacement 3.3 volt, CR1/3N battery. Replace the cover and rotate it to lock.

## ADDITIONAL REMOTE CONTROLS

A maximum of three controls can be programmed to each vehicle. Contact your Land Rover dealer to purchase additional units and have them programmed to your vehicle.