


## STANDARD AUDIO CONTROLS

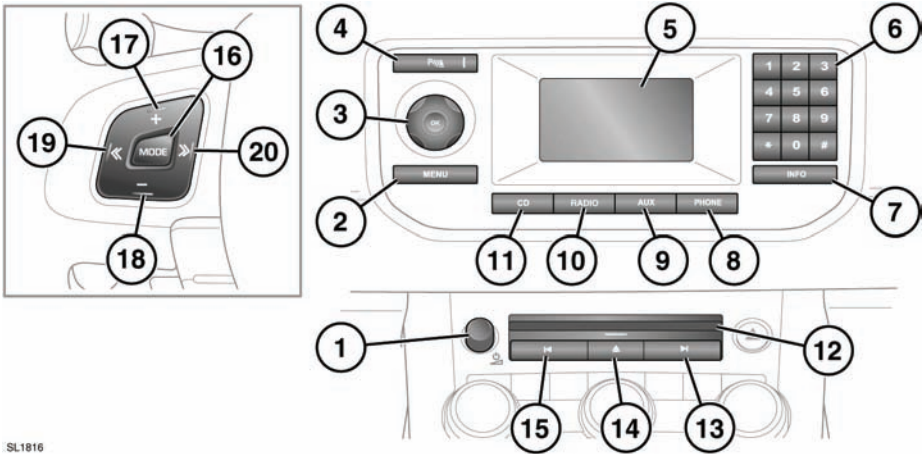

SL1816



**Sustained exposure to high sound levels can damage your hearing.**

1. Press to switch on/off.

**Note:** The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.

Rotate to adjust volume level.

**Note:** The maximum volume level will be restricted if the audio unit is used with the engine switched off.

2. **MENU** button:

- Audio settings
- Clock settings
- Language

3. **OK** and navigation menu control.

Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.

4. Parking aid.
5. Audio Information display.

6. Keypad.

7. **INFO**. Traffic/News information.

8. **PHONE** menu.

9. **AUX** input select.

10. **RADIO**. Waveband select (FM, FMAST, AM, AMAST).

When DAB is fitted, select for DAB1 or DAB2.

11. **CD** menu.

12. CD loading slot.

13. Seek up:

- Short press:
  - to select the next radio station upward in frequency or,
  - to select the next track on chosen audio source.
- Long press:
  - to enter radio manual seek mode or,
  - to scan forward through a CD track.In radio manual seek mode further short presses will change the frequency in single steps.