

## DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered, it can be deactivated by any one of the following methods:

- Pressing the unlock button on the Smart Key.
- Opening a door using keyless entry.
- Positioning a valid Smart Key underneath the steering column and pressing the START/STOP button. See previous graphic.

## SMART KEY TRANSMITTERS



**Any person fitted with an implanted medical device should ensure that the device is kept at a distance of at least 22 cm (8.7 in) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and device. See 221, SMART KEY TRANSMITTER LOCATIONS.**

## STEERING COLUMN LOCK



During vehicle recovery, a Smart Key must remain inside the vehicle, so that the steering column remains unlocked. See 241, RECOVERY METHOD.

Your vehicle is fitted with an electronic steering column lock, which locks and unlocks in conjunction with the vehicle locking system. It also locks automatically, after a time delay, if the ignition is switched off and the Smart Key is removed from the vehicle.

Any malfunction of the steering column lock will be indicated by the message **Steering Column Locked** being displayed in the message centre. If this occurs:

1. Lock and then unlock the vehicle using the Smart Key.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right.
3. If the problem persists, seek qualified assistance immediately.

## VALET MODE DEACTIVATING

If Valet mode is active when you enter the vehicle, touch the **Valet** button to view the Valet mode screen.

Enter your four digit PIN and touch the **OK** button.

**Valet mode is deactivated** is displayed.

- The tailgate will return to the previously set security requirement.
- All touch screen functions are enabled.

See 15, VALET MODE ACTIVATING.

**Note:** If the PIN number is lost or forgotten, Valet mode can be deactivated only by your Dealer/Authorised Repairer.

## OPERATING THE TAILGATE



Ensure there is a minimum space of 1 m (3 ft) above the rear of the vehicle before operating the tailgate. Insufficient space may result in damage to the vehicle.



Do not operate the tailgate if a cycle rack is fitted to the tailgate. Remove any cycles and/or racks before operating the tailgate.

There are two types of tailgate, powered and manual.