


MANUAL SEATS

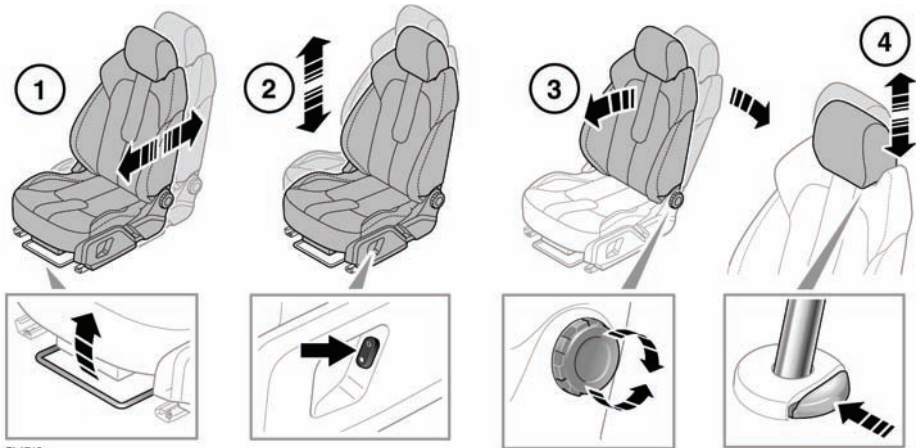

SL1713



Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.

1. Forward and back adjustment.
2. Height adjustment.
3. Backrest adjustment.
4. Head restraint adjustment (where fitted).