


Front seats

ELECTRIC SEATS

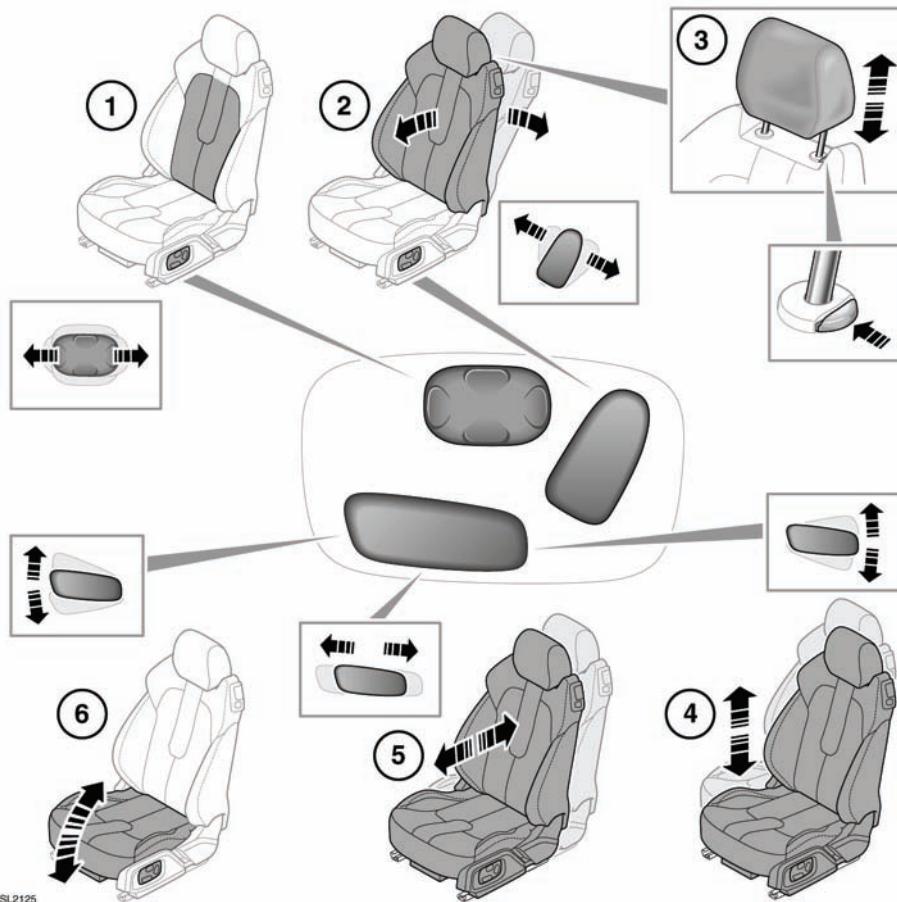

SL2125

1. Lumbar support adjustment.
2. Backrest adjustment.
3. Head restraint adjustment (where fitted).
4. Height adjustment.
5. Forward and back adjustment.
6. Cushion angle adjustment.

To adjust the seats, the Smart Key must be inside the vehicle.

⚠ Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.